


700977

ZODIAC 300 KIT, PIVOT SETUP

★OEM bushing cut into two pieces; one part goes on the same place as OEM. The other part goes on the new frame plate.

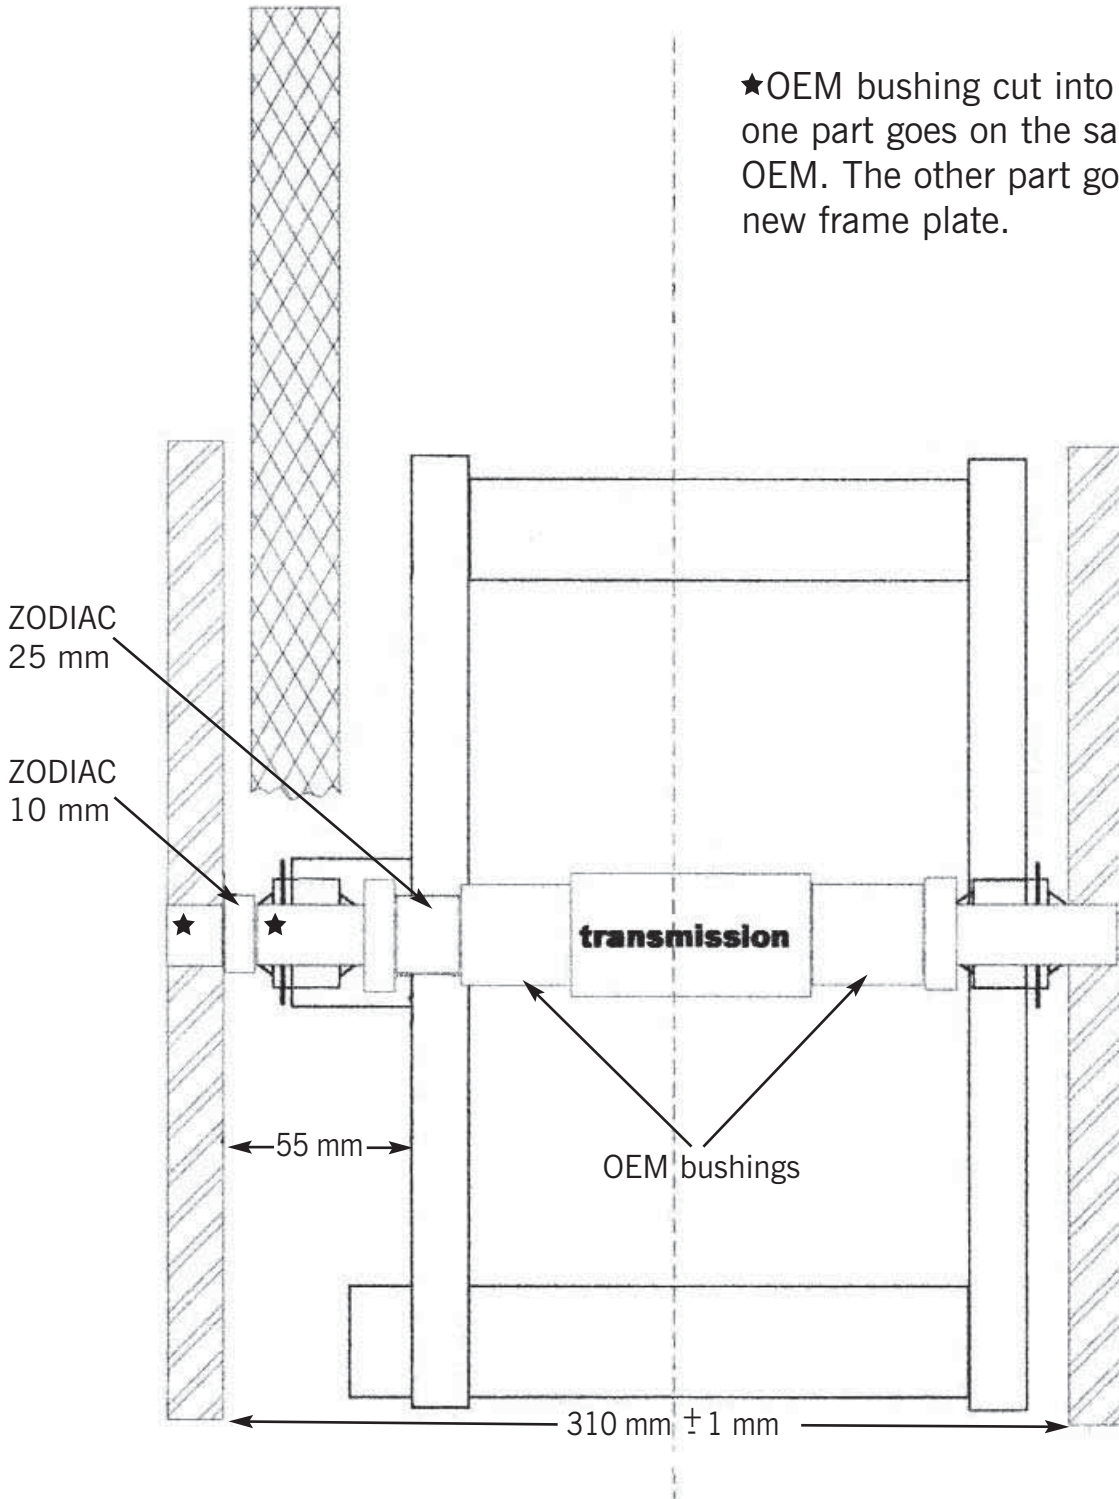

Kit setup on 2000-2006 OEM frame

